

- All Call** When the button is pressed, all programmed speaker zones are selected and corresponding LEDs on the RM-1000ECS will illuminate to indicate the zones are enabled. Speaker zones can be deselected individually by selecting the corresponding button or can relinquish all speaker zones by pressing the All Call button.
- ECS Reset** When the RESET button is pressed, all active ECS events will relinquish.
- CTRL** When the CTRL button is pressed, this allows operator consoles to request control of the system when a remote operator console is in use.
- Control Requested** A steady amber LED indicates a LOC-1000 is requesting control of the system.
- Remotely Controlled** A steady amber LED indicates a remote operating console is currently in control.
- Locally Controlled** A steady red LED indicates the local operating console is currently in control.

For service, contact:

Name: _____

Company: _____

Address: _____

Telephone: _____